

WORK SMARTER... NOT HARDER!

ASSEMBLY INSTRUCTIONS

FHR CABINET




STEP 1. OPEN BOX AND LAY OUT PANELS (5)

NB: RIGHT HAND PANEL HAS HINGES



STEP 2. JOIN LEFT HAND PANEL TO BASE

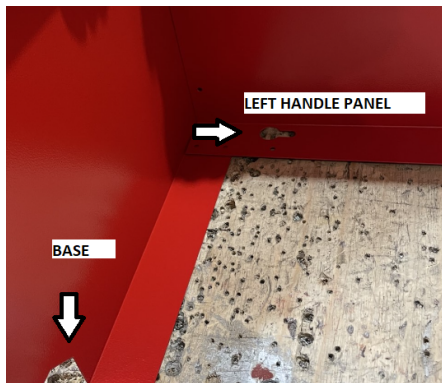

STEP 3. RIVERT SIDE PANEL TO BASE X 2



STEP 4. JOIN RIGHT HAND PANEL TO BASE



STEP 5. RIVERT SIDE PANEL TO BASE X 2



STEP 6. JOIN TOP PANEL TO SIDE PANELS



STEP 7. RIVERT TOP PANEL TO SIDE PANELS



STEP 7. RIVERT ALL PANELS TOGETHER AT CORNERS



STEP 7. INSTALL DOOR BY SLIDING ONTO HINGES

